

Electronic motor supervision J, JC, JS



General

FSV 82 is an electronic motor supervision available on the submersible drainage pumps.


Application

- Automatic restart after cut out of the thermal motor protection when motor temperature is reduced.
- Equipped to stop the pump when phase failure occurs. (Automatic restart when all three phases functions again.)
- Prevent the pump from starting if the phase sequence is incorrect (rotation is wrong). (Shift two phases and start again.)

Procedure

FSV 82 can be built in on 3-phase D.O.L started pumps (with contactor) J 24-J 84, JC 24, JC 54-JC 84, J 205, JS 24-JS 84.

On Star-Delta started pumps J 205-J 604 the FSV 82 can be installed in the external starter box.

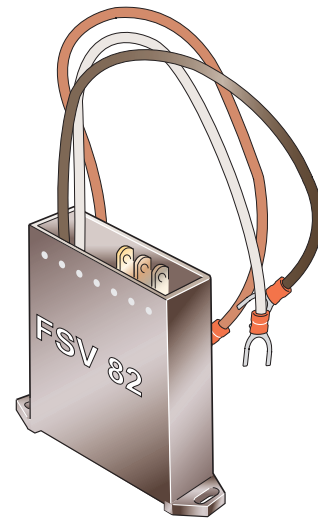

J 24, J 54 - J 84, JS 24 - JS 84

Voltage	Frequency	P/N
220-240 V	50 Hz	13300329
340-600 V	50 Hz	13300330
220-240 V	60 Hz	13300333
340-600 V	60 Hz	13300334

J 44, JC 24, JC 54 - JC 84

Voltage	Frequency	P/N
220-240 V	50 Hz	00831217
340-600 V	50 Hz	00831218
220-240 V	60 Hz	00831220
340-600 V	60 Hz	00831221

J 205

Voltage	Frequency	P/N
220-240 V	50 Hz	00831254
340-600 V	50 Hz	00831255
220-240 V	60 Hz	13300333
340-600 V	60 Hz	13300334

